

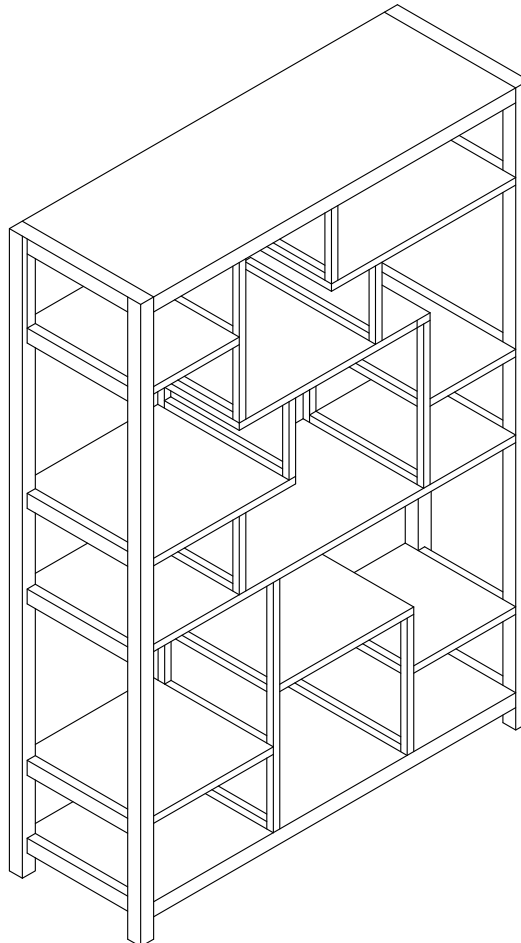
HOME DECORATORS COLLECTION

HDC# 08045 MFG# TW-18435BK / TW-18435WE / TW-18435EO
PARSONS DISPLAY SHELF 62"Hx40"Wx12"D




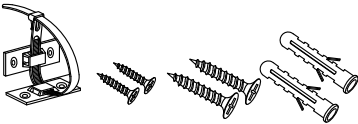

ASSEMBLY INSTRUCTIONS

Note: Before assembly, please be sure to work on a soft,
flat surface to avoid any damage to the finish.






















Made In China



HARDWARE LIST


<p>ROUND HEAD BOLT HORIZONTAL HOLE NUT 22 SETS</p>  <p>(1)</p>	<p>ROUND HEAD BOLT 44 SETS</p>  <p>(2)</p>	<p>WOODEN BUTTON 12 PCS</p>  <p>(3)</p>	<p>TILTING PREVENT HARDWARE 2 SETS</p>  <p>(4)</p>	<p>ALLEN KEY 1 PC</p>  <p>(5)</p>
---	---	--	--	--

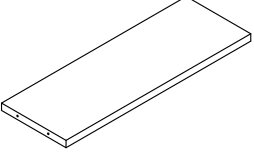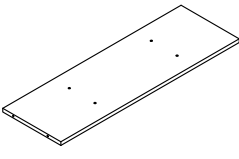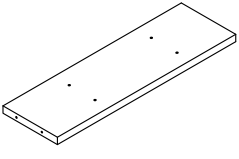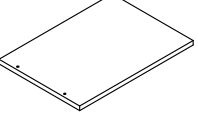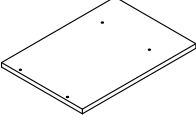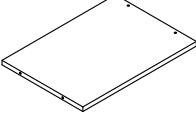PARTS LIST

<p>LEFT SIDE FRAME 1 PC</p>  <p>A</p>	<p>RIGHT SIDE FRAME 1 PC</p>  <p>B</p>	<p>TOP PANEL 1 PC</p>  <p>C</p>
<p>SHELF 1 PC</p>  <p>D</p>	<p>BOTTOM PANEL 1 PC</p>  <p>E</p>	<p>MIDDLE FRAME 1 PC</p>  <p>F</p>
<p>MIDDLE FRAME 1 PC</p>  <p>G</p>	<p>SHELF 1 PC</p>  <p>H</p>	<p>SHELF 1 PC</p>  <p>I</p>
<p>SHELF 1 PC</p>  <p>J</p>	<p>MIDDLE FRAME 1 PC</p>  <p>K</p>	<p>MIDDLE FRAME 1 PC</p>  <p>L</p>
<p>MIDDLE FRAME 1 PC</p>  <p>M</p>	<p>MIDDLE FRAME 1 PC</p>  <p>N</p>	<p>SHELF 1 PC</p>  <p>O</p>
<p>SHELF 1 PC</p>  <p>P</p>	<p>SHELF 1 PC</p>  <p>Q</p>	<p>SHELF 1 PC</p>  <p>R</p>
<p>SHELF 1 PC</p>  <p>S</p>	<p>MIDDLE FRAME 1 PC</p>  <p>T</p>	<p>MIDDLE FRAME 1 PC</p>  <p>U</p>

STEP 1: ASSEMBLE SIDE FRAME (A & B), SHELF (D) AND BOTTOM PANEL (E)

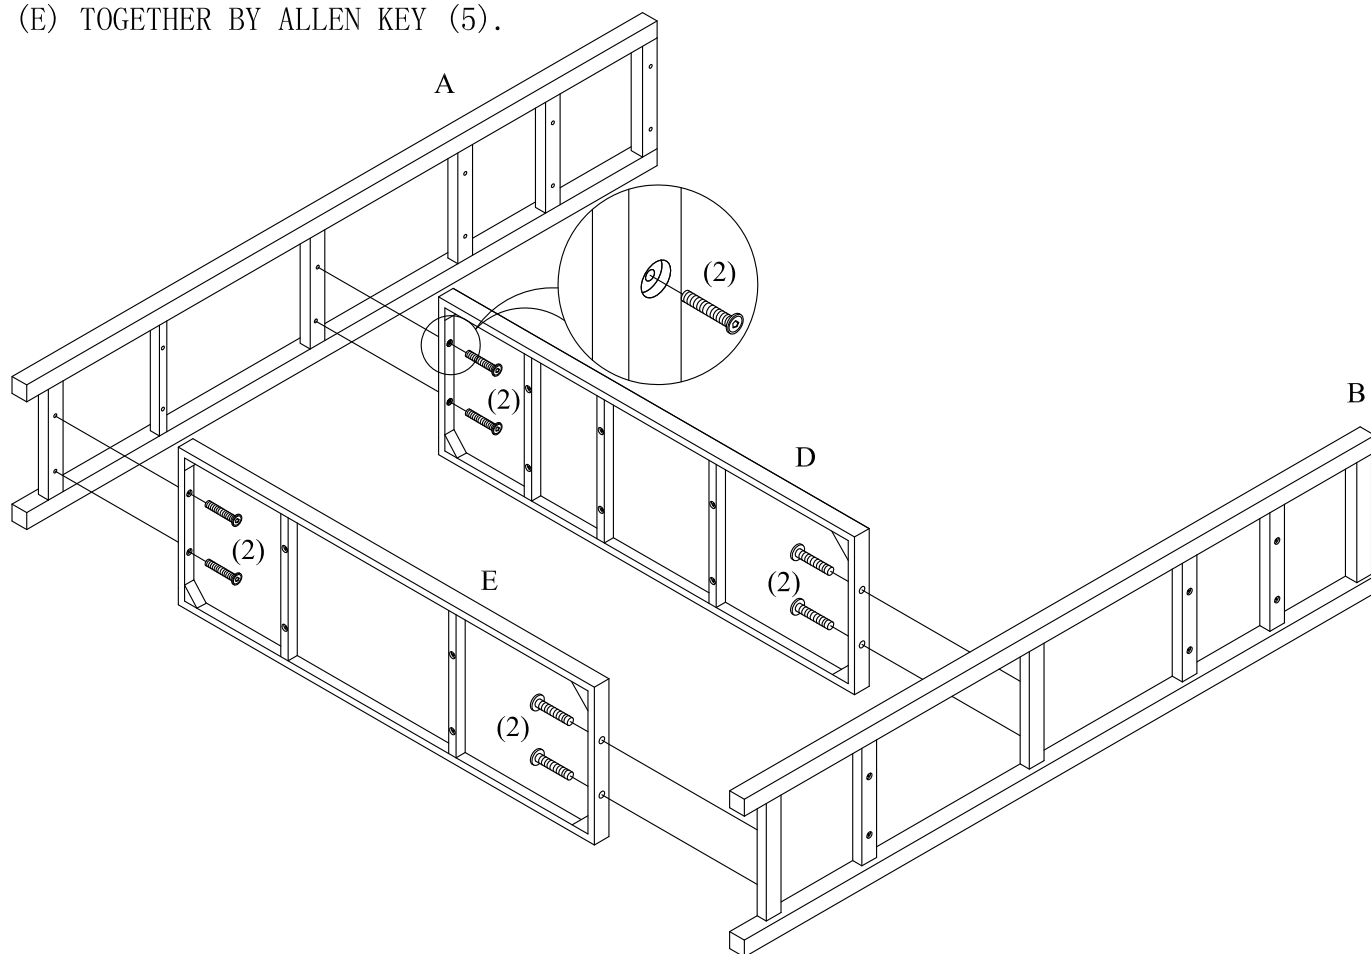
- USE ROUND HEAD BOLT (2) TO ASSEMBLE SIDE FRAME (A & B), SHELF (D) AND BOTTOM PANEL (E) TOGETHER BY ALLEN KEY (5).



STEP 2: ASSEMBLE MIDDLE FRAME (F & G)


- USE ROUND HEAD BOLT (2) TO ASSEMBLE MIDDLE FRAME (G & F), SHELF (D) AND BOTTOM PANEL (E) TOGETHER.

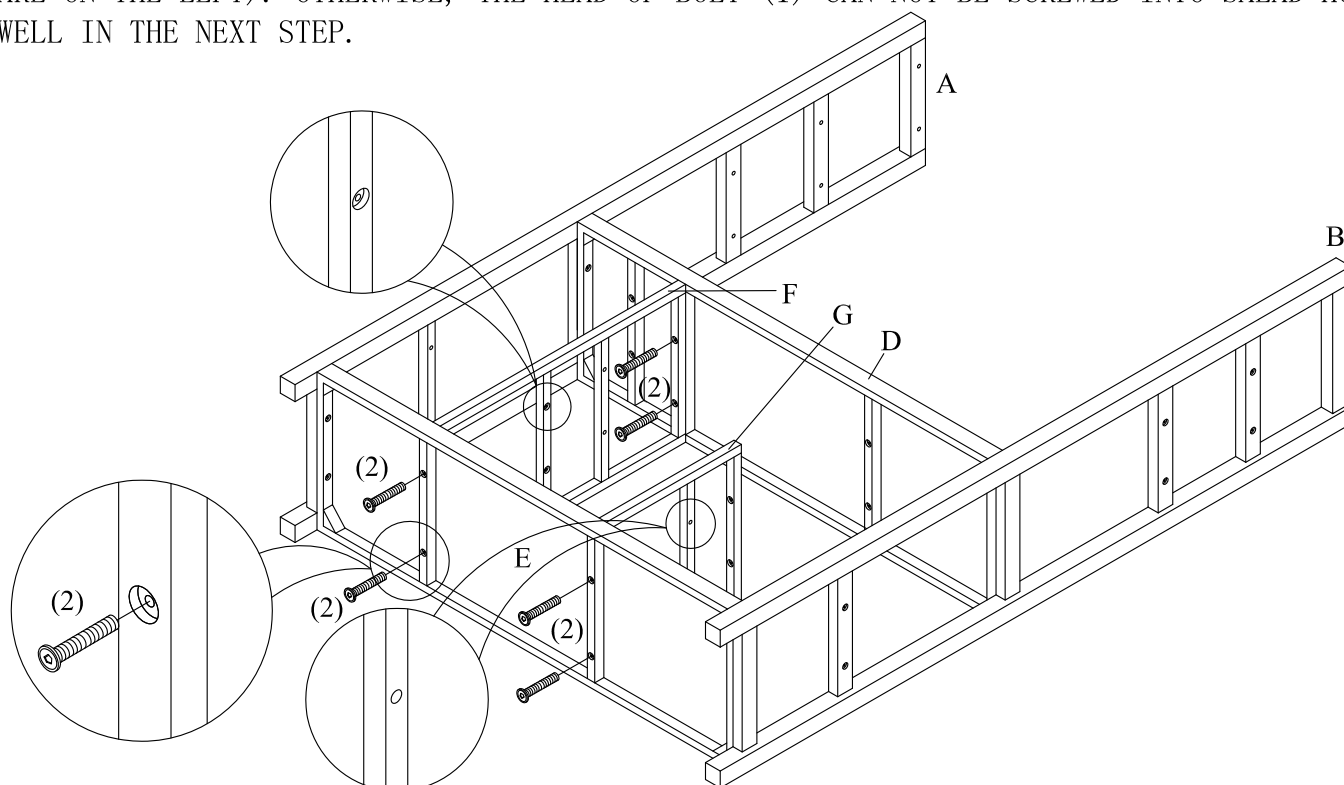REMARK: PLEASE MAKE SURE THE MIDDLE FRAME (F & G) ARE ASSEMBLED IN RIGHT DIRECTION (THE SALAD HOLES ON THE FRAME (F) ARE ON THE RIGHT AND THE SALAD HOLES ON THE FRAME (G) ARE ON THE LEFT). OTHERWISE, THE HEAD OF BOLT (1) CAN NOT BE SCREWED INTO SALAD HOLES WELL IN THE NEXT STEP.




STEP 3: ASSEMBLE SHELF (H & J)

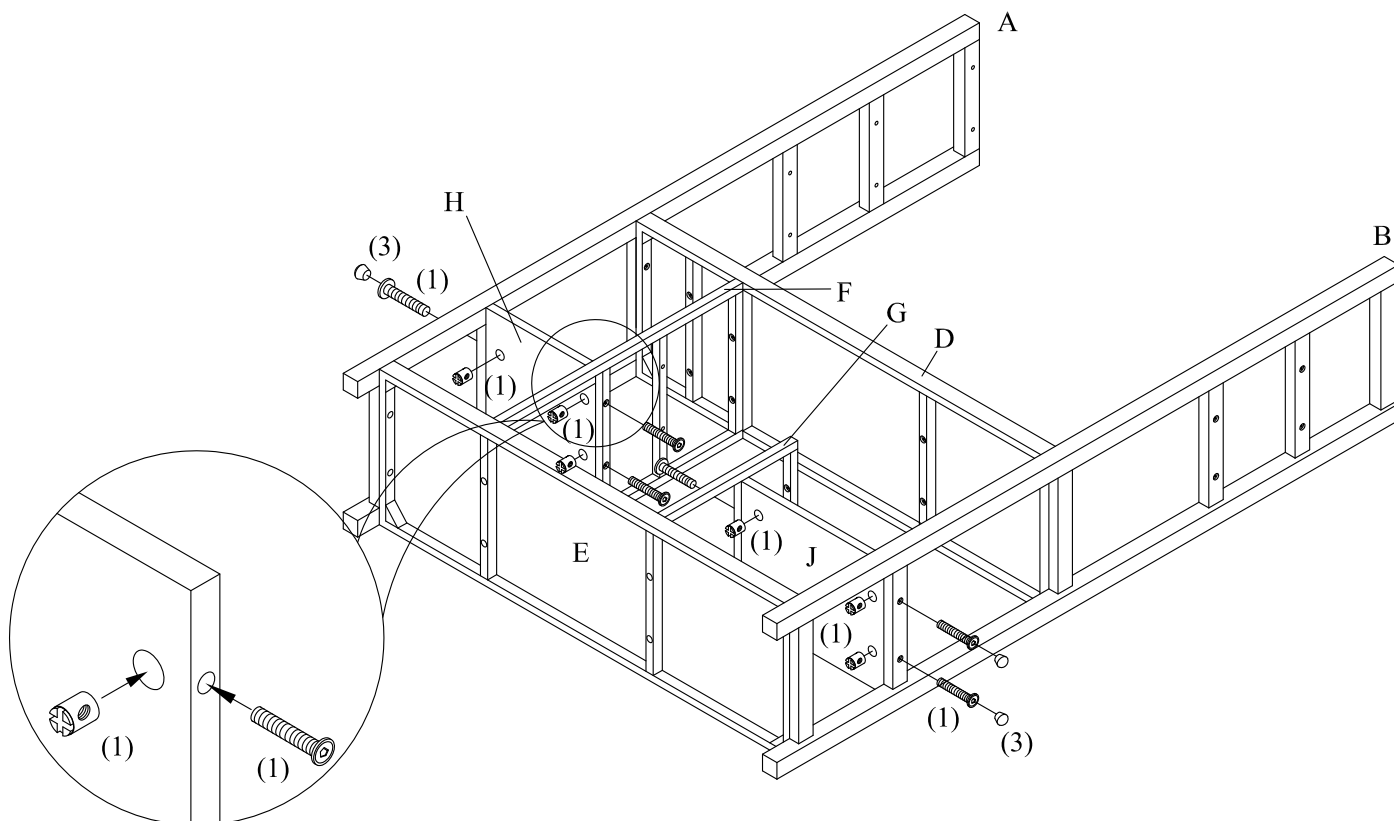- USE ROUND HEAD BOLT & HORIZONTAL HOLE NUT (1) TO ASSEMBLE SHELF (H & J), SIDE FRAME (A & B) AND MIDDLE FRAME (F & G) TOGETHER.
- USE WOODEN BUTTON (3) TO COVER THE BOLTS HOLES ON 2 SIDE FRAMES AS SHOWN.




STEP 4: ASSEMBLE SHELF (I)

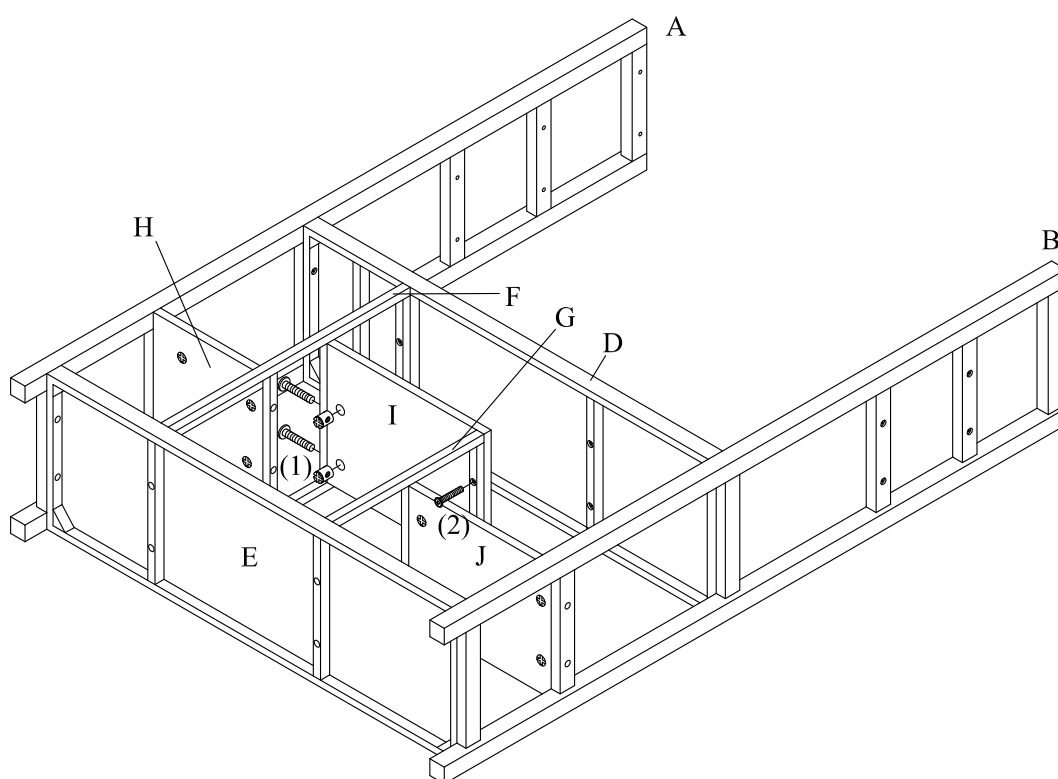- USE ROUND HEAD BOLT & HORIZONTAL HOLE NUT (1) AND ROUND HEAD BOLT (2) TO ASSEMBLE SHELF (I) AND MIDDLE FRAME (F & G) TOGETHER AS SHOWN.




STEP 5: ASSEMBLE MIDDLE FRAME (L & M)

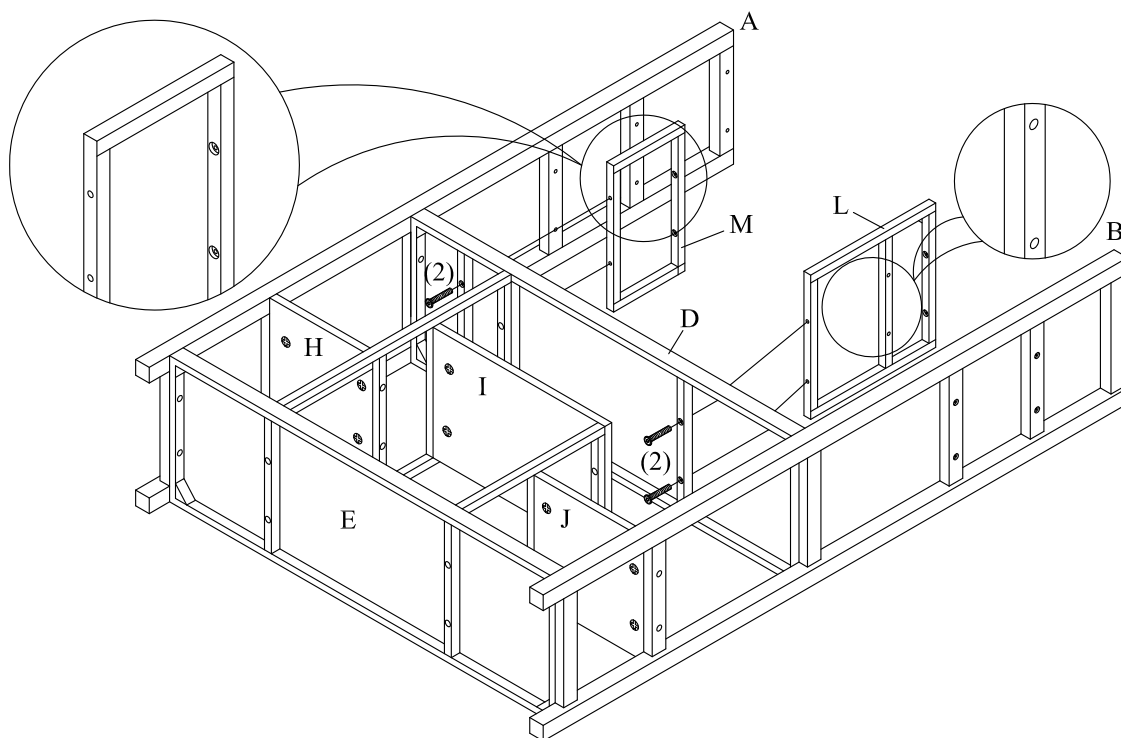- USE ROUND HEAD BOLT (2) TO ASSEMBLE MIDDLE FRAME (L & M) AND SHELF (D) TOGETHER AS SHOWN. REMARK: PLEASE MAKE SURE THE MIDDLE FRAME (L) IS ASSEMBLED IN RIGHT DIRECTION (THE SALAD HOLES ON THE FRAME (L) ARE ON THE LEFT). OTHERWISE, THE HEAD OF BOLT (1) CAN NOT BE SCREWED INTO SALAD HOLES WELL IN THE NEXT STEP.




STEP 6: ASSEMBLE SHELF (Q & S)

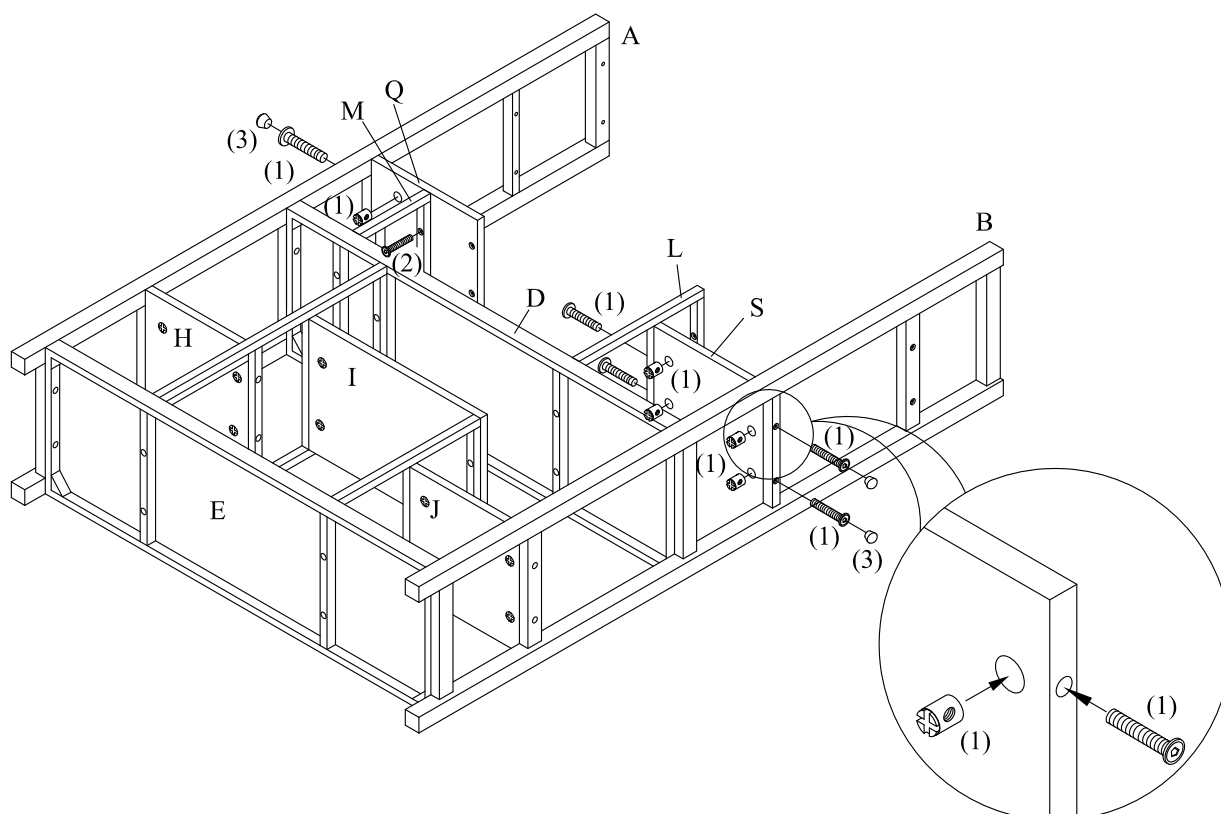- USE ROUND HEAD BOLT & HORIZONTAL HOLE NUT (1) AND ROUND HEAD BOLT (2) TO ASSEMBLE SHELF (Q & S), MIDDLE FRAME (M & L) AND SIDE FRAME (A & B) TOGETHER.
- USE WOODEN BUTTON (3) TO COVER THE BOLTS HOLES ON 2 SIDE FRAMES AS SHOWN.



STEP 7: ASSEMBLE MIDDLE FRAME (U) AND SHELF (P)

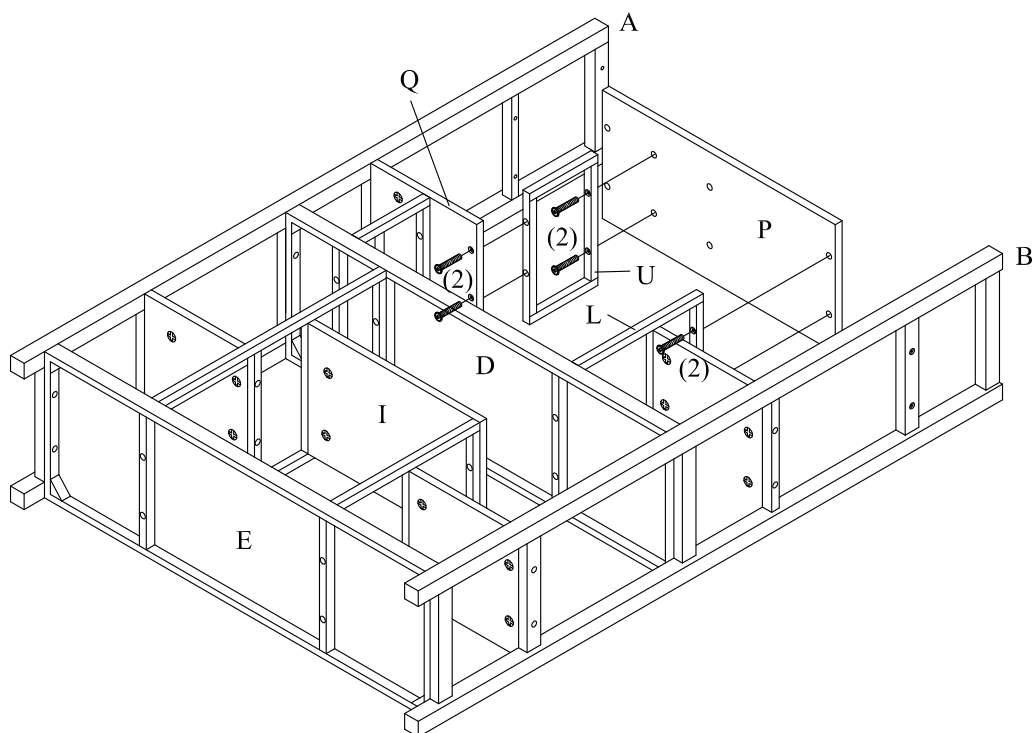
- USE ROUND BOLT (2) TO ASSEMBLE MIDDLE FRAME (U) ON THE SHELF (Q), THEN ASSEMBLE SHELF (P) ON THE MIDDLE FRAME (U & L) AS SHOWN.



STEP 8: ASSEMBLE MIDDLE FRAME (K & T)


- USE ROUND HEAD BOLT (2) TO ASSEMBLE MIDDLE FRAME (K & T) AND SHELF (P) TOGETHER.

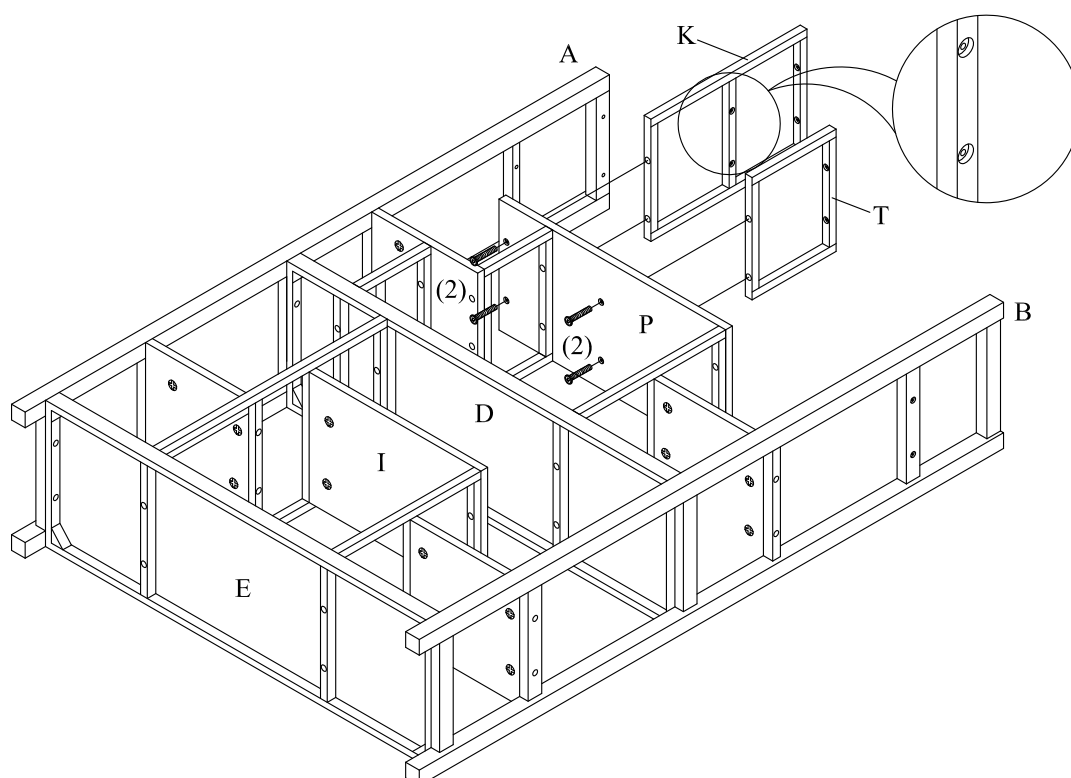REMARK: PLEASE MAKE SURE THE MIDDLE FRAME (K) IS ASSEMBLED IN RIGHT DIRECTION (THE SALAD HOLES ON THE FRAME (K) ARE ON THE RIGHT). OTHERWISE, THE HEAD OF BOLT (1) CAN NOT BE SCREWED INTO SALAD HOLES WELL IN THE NEXT STEP.




STEP 9: ASSEMBLE SHELF (R & O)

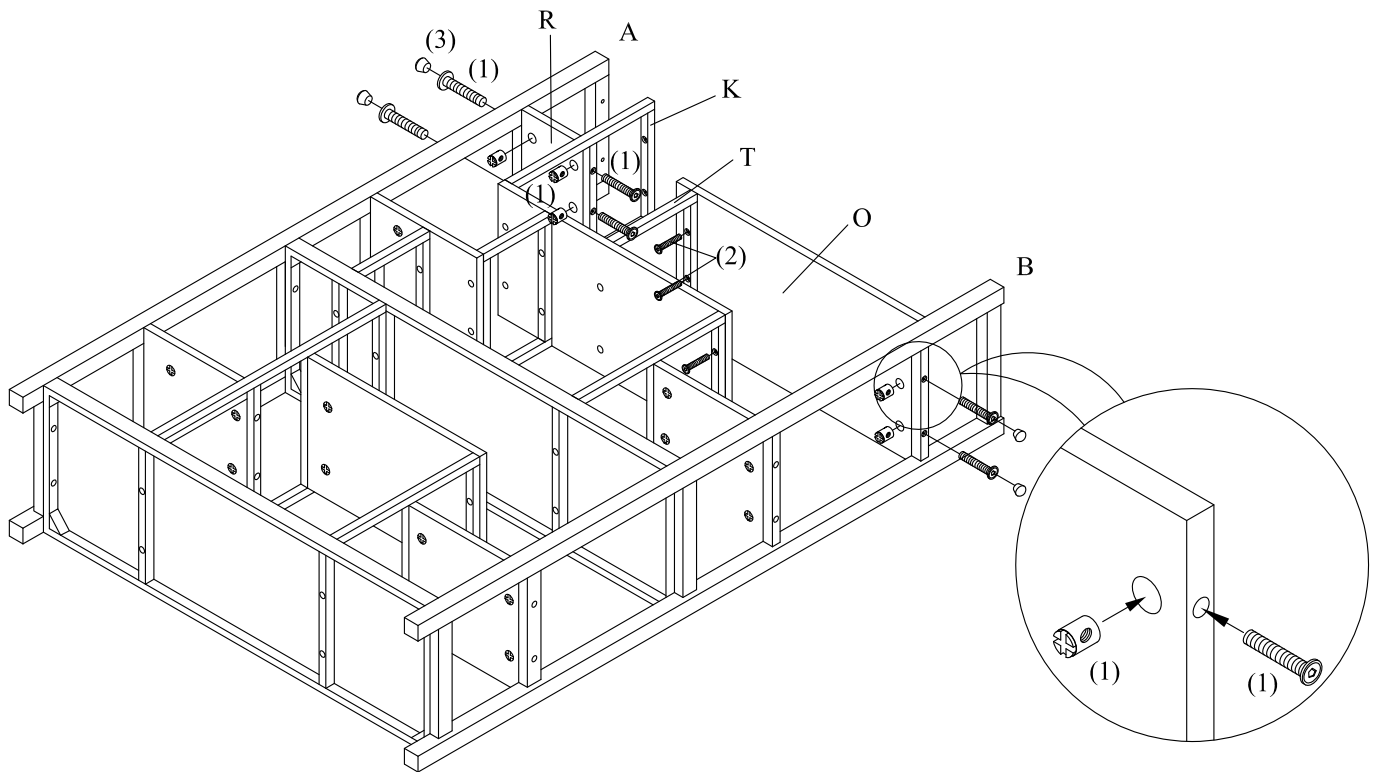- USE ROUND HEAD BOLT & HORIZONTAL HOLE NUT (1) AND ROUND HEAD BOLT (2) TO ASSEMBLE SHELF (R & O), MIDDLE FRAME (K & T) AND SIDE FRAME (A & B) TOGETHER.
- USE WOODEN BUTTON (3) TO COVER THE BOLTS HOLES ON 2 SIDE FRAMES AS SHOWN.



STEP 10: ASSEMBLE TOP PANEL (C) AND MIDDLE FRAME (N)

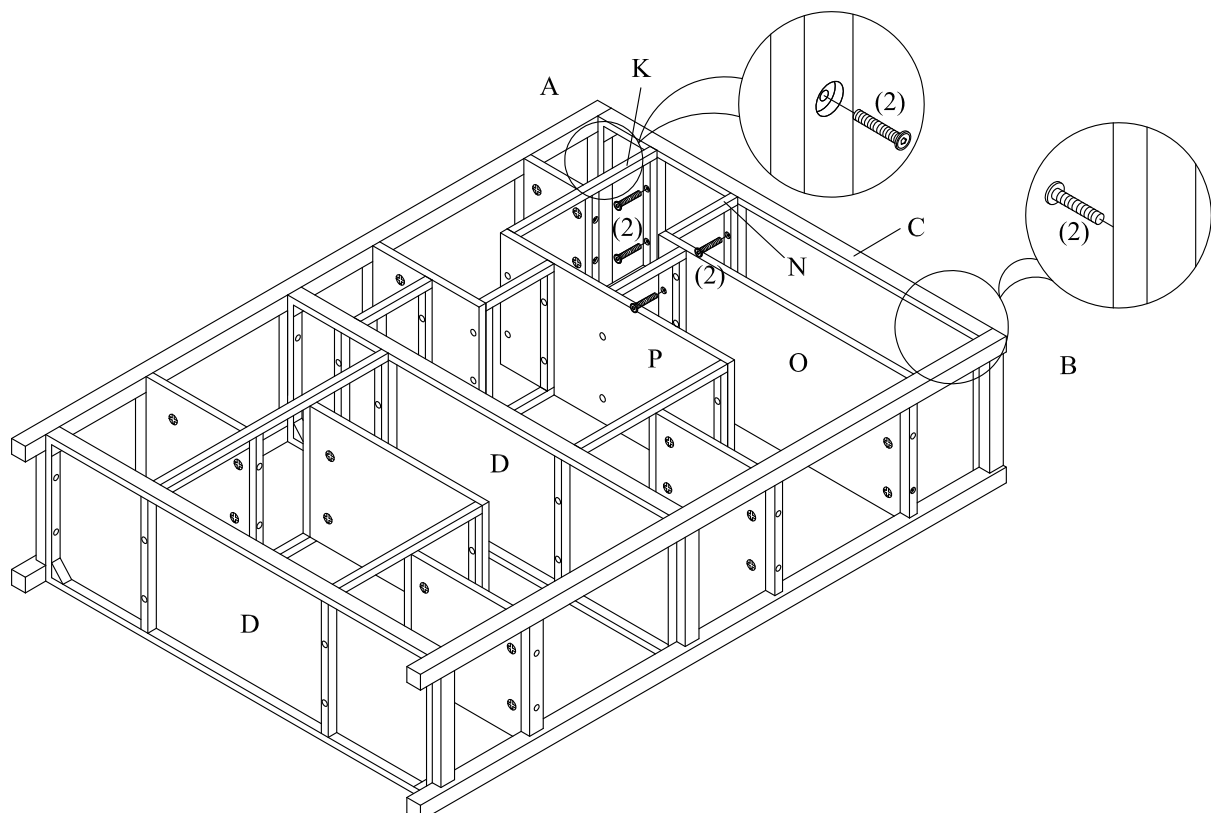- USE ROUND HEAD BOLT (2) TO ASSEMBLE MIDDLE FRAME (N) ON THE SHELF (O), THEN ASSEMBLE TOP PANEL (C) ON THE MIDDLE FRAME (K & N) AND SIDE FRAME (A & B) AS SHOWN.



STEP 11: ASSEMBLE PREVENT DEVICE (4)

- USE ELECTRIC DRILL TO DRILL 4 SMALL HOLES ON THE DESIRED LOCATION OF WALL, INSERT 4 GECKOS INTO THE 4 HOLES BY RUBBER MALLET, USE TWO LONG SCREWS TO ATTACH ONE PLASTIC SLICE ONTO WALL, THEN USE TWO SHORT SCREWS TO ATTACH ANOTHER PLASTIC SLICE ON THE BACK OF PRE-ASSEMBLED PRODUCT.
- USE THE PLASTIC ROPE TO LINK THE PRODUCT AND WALL TOGETHER.

